

# NAVIGATOR



## USER GUIDE

### EIk-M1KPNAV Touchscreen Keypad

## Introduction

Congratulations on purchasing a Navigator Keypad as part of your featured packed M1 Security and Automation controller.

Navigator is a stylish Touch Screen Keypad interface for use with the M1 series Cross Platform Controllers. It features a large touch sensitive 3.5" color LCD with bright, easy to use graphic icons and soft keys. Navigator makes the M1 Security and Automation system extremely easy to operate.

This User Guide Manual is provided to help acquaint you with the operation of the Navigator Touchscreen Keypad so that you may become proficient with its operation. Full operation of your M1 Control may also require that you read and follow the regular M1 User Guide that was furnished with the M1 Control.

ALL USERS SHOULD READ AND FOLLOW THE INSTRUCTIONS AND CAUTIONS CONTAINED IN THIS MANUAL. FAILURE TO DO SO COULD RESULT IN THE SYSTEM NOT WORKING PROPERLY. KEEP THIS MANUAL IN AN EASY TO ACCESS LOCATION. READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY. IF YOU DO NOT UNDERSTAND ANY PORTION OF THIS MANUAL OR IF YOU HAVE ANY QUESTIONS ABOUT YOUR SYSTEM, CONTACT THE INSTALLING COMPANY FOR ADDITIONAL ASSISTANCE.

### **PLEASE BE AWARE OF THE FOLLOWING:**

The level of security obtained is directly related to two major factors.

1. The quantity, quality, and placement of sensors attached to this system.
2. The knowledge and operating skills that you have of the system, including but not limited to the weekly testing of the complete system.

Important notes when preparing a security/safety plan for your home or business:


1. This system is an electronic device and is subject to failure or malfunction. You should not rely on it as your single source of security.
2. This system will not work without power.
3. This system should be tested weekly.
4. Audible warning devices will need to be loud enough, wired correctly, and properly placed to provide adequate notification of an alarm event.
5. Smoke and heat detectors may not detect smoke and heat in all situations.
6. Only qualified security professionals should install and maintain this system.
7. It may be possible to arm this system WITHOUT the backup battery connected or with less than an adequate charge. Weekly testing of the system with AC Power removed should be performed to verify that the battery is connected and adequately charged.
8. Care should be taken after testing to make certain that AC Power is restored.

The National Fire Protection Association publishes a standard for household fire warning equipment. N.F.P.A. #72. Further Information can be obtained by contacting; NEPA Public Affairs Dept., Batterymarch Park. Quincy, MA 02269.


# TABLE OF CONTENTS

<b>Main Screen</b> .....	<b>4</b>
Status Window.....	4
View Violated Zones.....	5
EXIT - Arming in the “Away” Mode .....	5
EXIT - Arming in the “Vacation” Mode .....	5
STAY - Arming in the “Stay” Mode.....	6
F Keys - Special Function Keys .....	6
Display “Show” F Keys.....	7
BYPASS - Excluding Zone(s).....	7
CHIME - Annunciating Zone Activations.....	7
Disarming and Resetting the System.....	7
Acknowledging an Alarm.....	8
Troubles .....	8
<b>Main Menu Screen</b> .....	<b>9</b>
Automation .....	10
Reset Smoke Detectors .....	18
Walk Test Area .....	18
History Log .....	19
Zone Status.....	19
Change User Codes .....	20
System Settings .....	21
Installation Programming.....	21
Select Area.....	22
Synchronise.....	23
Clean Screen.....	23
Authorise.....	23
Keypad Locked.....	23
<b>Fire Safety &amp; Maintenance</b> .....	<b>24</b>
Silencing a Fire Alarm.....	24
Resetting Smoke Detectors.....	24
Acknowledge/Reset an Alarm .....	24
Household Fire Safety Audit .....	24
<b>Emergency Evacuation Plans</b> .....	<b>25</b>
<b>System Testing</b> .....	<b>26</b>
<b>FCC Compliance Statement</b> .....	<b>26</b>
<b>Navigator Protective Screen Film</b> .....	<b>27</b>


## Main Screen

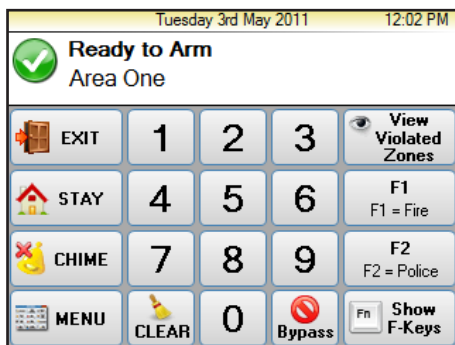

 The top line of the Main screen displays the current time and date from the M1 Control. Actual display may vary slightly from that shown.




### Status Window

 

A Status Window directly beneath the time and date includes an icon which will be either green, yellow, or red, depending on the M1's status.


A text description of the current status appears on the top line.

 The bottom line of text alternates between displaying keypad area, current trouble and/or custom message.



When the M1 status is "Not Ready" or "Ready Force" the total number of violated zones will be displayed on the right side of the status window.

## **View Violated Zones**

 

To view zones that are violated (not ready) press the button labeled “Violated Zones” on the top right corner of the button arrangement. The display will begin with the first violated zone. The Up and Down buttons that appear in the Status Window can be used to move between zones.

The Main Screen contains a numeric entry keypad along with several feature buttons, some of which are not found on other Elk M1 Keypads.

## **EXIT - Arming in the “Away” Mode**

Away mode arming is the highest arm level, intended for use when the premises is unoccupied. Both perimeter and interior zones will be armed.

The **Ready** to Arm or Ready to Force Arm must be present for the alarm to be armed.

1. Enter a User code or press Exit (Quick Arm must enable by Installer).
2. Display will change to Armed Away.  
The exit tone will begin to countdown.
4. Leave the premises immediately while the exit delay is active.
5. At the end of the exit delay the system will be fully armed Away.

During the final 10 seconds of the exit delay the exit tone will beep faster, warning that time is nearly expired. If you feel that you will NOT be able to get out and close the exit door within the remaining time it is recommended that you start over by returning to the keypad, disarm the system, and arm again.

## **EXIT - Arming in the “Vacation” Mode**

Vacation mode is a second level of Away mode and is primarily useful to activate energy saving automation features when the building is not occupied for an extended time. After arming, press the EXIT button again to change the armed mode to vacation.

## **STAY - Arming in the “Stay” Mode**

Stay mode arming is used when the premises is occupied. All perimeter doors and windows are armed, and all interior zones are excluded.

1. Enter a User code or press the STAY key (Quickarm). \*\*
2. Display will change to Armed Stay. *Exit tone is silent during Stay arming.*
3. All interior zones will be excluded in the Stay mode.  
Exit and Entry zones will still have their respective delay times.

\*\* Additional presses of the Stay key (while the exit delay is still active) may be allowed to switch to alternate modes of Stay. In some instances this may be allowed even while the system is armed.

Armed Stay Instant = Deletes the Entry Delay on entry/exit zones.

Armed Night = Adds protective zones designated as Night Zones.

Armed Night Instant = Adds the Night zones AND deletes Entry Delay.

### \*\* Auto Stay Arming

There is an option which allows the system to automatically switch from Away mode to Stay mode when no perimeter delayed doors are opened during the exit delay count-down time. Essentially, this auto stay option makes sure the alarm is armed in the stay mode if there is no detection of anyone leaving the building.

\*\* These options must be enabled by the Installer.

## **F Keys - Special Function Keys**

There are 6 special function “F” keys which your Installer may enable for purposes as emergency panic alarm, automation event triggers (lights, outputs), and more. F1 and F2 are on the Main screen. Pressing “Display F=Keys” will present all 6 “F” keys together on an extended main screen. Each individual key may be programmed to allow activation via a single press, or to require double press (2 quick presses in a row). Double press helps prevent accidental activation. If a key is set to require double press the screen will display “Press F\_ Again To Activate” immediately after the first press. This times out after ~8 seconds if no 2nd press occurs.

**F1 FIRE** - If enabled by the Installer this key will trip a fire alarm panic. An Alarm Monitoring center can be contacted if you subscribed to monitoring.

**F2 POLICE** - If enabled by the Installer this key will trip a police panic alarm. The Installer can enable this to either be silent or audible. An Alarm Monitoring center can also be contacted IF you subscribed to monitoring.

## **Display “Show” F Keys**

Pressing this button will swap the display to the extended Main screen. All 6 of the “F” keys are available on this screen.

## **BYPASS - Excluding Zone(s)**

Bypass permits zones to be excluded (ignored) by the control during the current armed period. Bypassed zones cannot trip an alarm. Bypasses on zones are automatically canceled when the control is disarmed.

1. Press the **Bypass** key PLUS the number of the zone to be bypassed.
2. Press the **Bypass** key again.
3. The display will indicate whenever one or more zones are bypassed.

Note: Only zones programmed as bypassable may be bypassed.  
Bypassing may also require entry of a user code.

## **CHIME - Annunciating Zone Activations**

Chime produces an audible alert when selected doors, windows, or other zones are opened (violated). This is ideal for annunciating when someone enters or leaves the premises through a normal doorway, but it may also be used to announce abnormal access to restricted areas.

There are 4 selections or levels of Chime: Tone, Voice, Tone/Voice, and Off.

1. Press the Chime key one time to select the Chime Tone mode.
2. Press again within ~30 seconds to select Chime Voice mode.
3. Press again within ~30 seconds to select Chime Tone/Voice mode.
4. Pressing again within ~30 seconds will turn Chime mode Off.

Note: Only the installer has the ability to program which doors, windows, etc. (zones) will be included in the Chime mode.

## **Disarming and Resetting the System**

When you enter the premises through one of the Entry delayed zones the system should sound a continuous entry delay tone and display a count down of the entry delay time.

1. Proceed directly to the keypad and enter a valid user code.
2. The entry delay tone should stop and the system will be disarmed.

## **What to do if the Alarm is Sounding**

1. Proceed directly to the Keypad and enter your user code.
2. The alarm and/or keypad tone should silence.
3. The System Armed display should disappear.
4. If the alarm was accidental, contact the Central Monitoring Center to avoid a false dispatch of the authorities.

Note: False alarms often occur when someone enters the building and doesn't enter their User Code prior to the entry delay time expiring. The display shows the alarm type and first zone that tripped.

## **Acknowledging an Alarm**

After an alarm has been silenced by a valid user code, the display will continue to show the alarm type and zone until the Clear key is pressed or until a valid user code is entered a second time. This "Acknowledgment" is so that the user sees what caused the alarm after things are quieted.

To acknowledge the alarm and reset the system:

1. Press the Clear key or enter your user code again.
2. The alarm/condition will clear from the keypad display.

## **Troubles**

There are numerous trouble conditions which the system may display:

- AC Power Failure
- Low Backup Battery
- Telephone Line Fault
- Fire Alarm Trouble
- Missing Keypad, Expander (Zone or Output)
- Communications Fail


Troubles are annunciated by an intermittent beeping from the keypad and a display of the Trouble condition(s). The beeping may be silenced by pressing the Clear key but the trouble must be acknowledged before other keypad operation may continue.

1. To acknowledge a trouble condition enter a user code.
2. Until the trouble condition is resolved, the keypad will momentarily flash the condition along with the normal keypad information. If a new Trouble should occur, the keypad beeping will resume.



## Main Menu Screen


The **Main Menu screen** will be displayed when the Menu button is pressed on the Main screen. Various system User and Installer options are available.

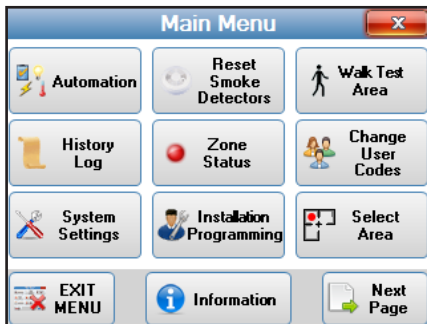

The Main Menu is split across 2 pages.


To move between the pages press “Next Page” or “Previous Page”.

An **Information button** at the bottom of both menu pages provides contact information for your Installation Company. This page must be filled in by the Installer.

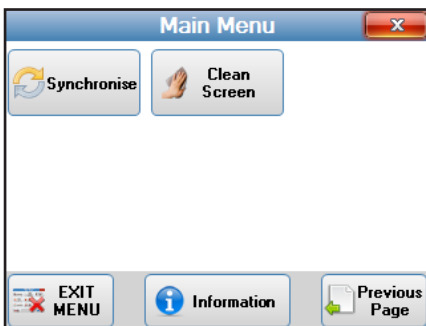

To return to the main screen press the EXIT MENU button or press the red close button on the top right of the screen.

## Automation

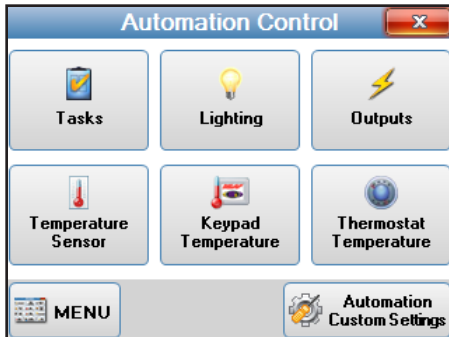


The M1 system has six (6) categories of Automation options which may be controlled via the Automation button. Your system may or may not be configured with these options. When the “**Automation button**” is pressed the screen will display the following options:

- **Tasks**
- **Lighting**
- **Outputs**
- **Temperature Sensor**
- **Keypad Temperature**
- **Thermostat Temperature**
- **Automation Custom Settings**

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

## Automation - Task Activation

A Task is an M1 feature that is similar in operation to a “macro” found in a word processor or spreadsheet program. It allows a series of automation steps or processes to be activated by a single button press. Each task may have a name such as: Water the Lawn (to turn on electric water valves), Welcome Home (to turn on a series of Lights or adjust the temperature).

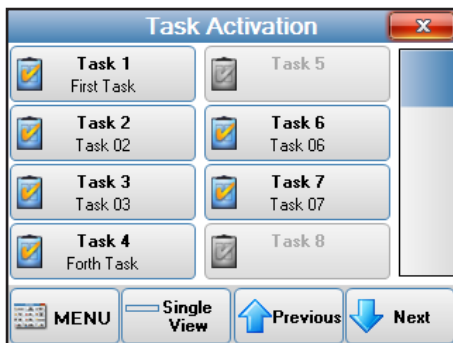

The Navigator Task Activation screen can display up to 8 task buttons at one time. Each task button displays the task number with or without a name.

A scroll bar along the right side as well as the Previous and Next buttons may be used to move around to additional pages of tasks.


A single press of a task button is all that is required to activate that task. The button will momentarily light up when touched, however the task buttons will never be illuminated when viewed. This is due to the fact that a task does not have a state of On or Off, only momentary.

NOTE: The installer may have tagged a task to “not show” on the Task Activation screen. In reality the task button will still be shown on the screen, but will be greyed out to indicate that it cannot be manually activated. These would typically be used for special internal functions.

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

## Automation - Task Activation - Single View

At the bottom of the Task Activation screen is a “Single View” button. This provides a means to locate and activate a single Task, including a Task which has been greyed out or “hidden” on the regular screen. This button is mainly intended for use by advanced users that understand the reason a Task may

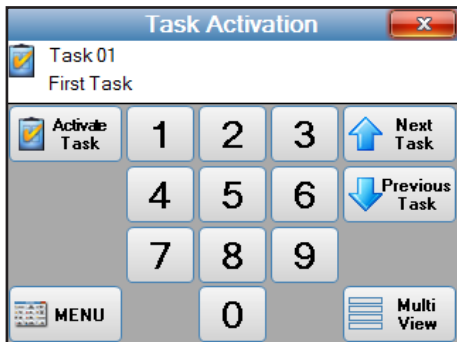

be hidden, and understand the consequences that may be involved when activating a hidden task.

Press the “Single View” button to display the Single View Tasks screen.

Press the Next or Previous buttons to scroll through a list of all available Tasks. You may also directly choose a Task by entering its two digit number (if known). NOTE: Direct number entry is the only way to gain access to a hidden task. The Next and Previous buttons skip over hidden Tasks.


Press the Activate Task button when you locate the desired task.

To return to the previous screen press “Multi View.”

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

## Automation - Lighting Control

This menu option allows access to view and control any intelligent lighting devices which may be integrated with your M1 system.

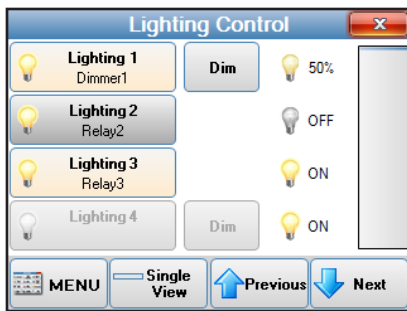

The Lighting Control screen can display up to 4 lights at one time.

A scroll bar along the right side will scroll to 4 more lights, as can the Previous and Next buttons.

Each Light has a number, a name, and a icon showing the current state. The current status is also shown by text with: ON, OFF, or Dim % (if the light is dimmable).

Some lights may be intentionally hidden. These are generally programmed by the installer for applications not necessarily needed from the keypad. These lights will be greyed out to prevent accidental activation.


To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

### Automation - Lighting Control - Single View

At the bottom of the Lighting Control screen is a “Single View” button.

This provides a means to locate and control any light, even one that has been greyed out or “hidden” on the regular Lighting screen.

Press “Single View” and then use the Next or Previous buttons to scroll through a list of available Lights. You may also directly choose a Light by entering its two digit number (if known).

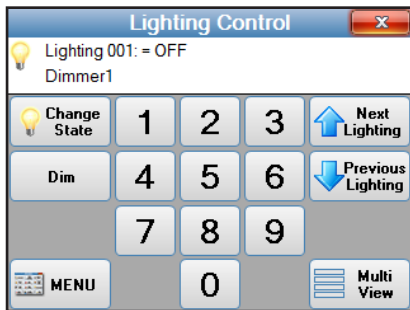

NOTE: Direct number entry is the only way to gain access to a hidden Light. The Next and Previous buttons skip over hidden Lights.

In Single View the lighting state can be toggled using the “Change State” button. ie Turn lighting ON or OFF.

If the Light is dimmable then a Dim button will be displayed. Press the Dim button will display the Lighting Control Dim screen.

To return to the regular Light screen press “Multi View”.

To return to the Main Menu press the **Menu** button.

To return completely back to the Main screen press the red close button on the top right of the screen.


## Automation - Lighting Control - Lighting Dim

Pressing DIM will present the following screen.

The lighting number, lighting name, and current dim level (if known) is displayed at the top of the screen.

The lighting dim level may be changed by pressing one of the lighting dim percentage buttons. The button corresponding to the current dim value will be highlighted.

To return to the regular Light screen press “Back”. To return completely back to the Main screen press the red close button on the top right of the screen.

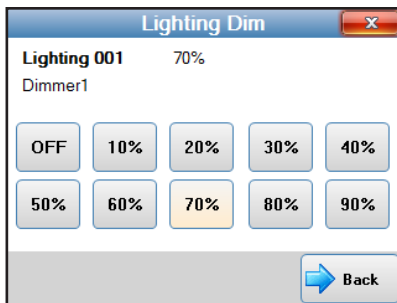

Note: Lighting devices may take a little longer to display than Tasks or Outputs since Navigator must retrieve the status of each one from the M1 panel.

## Automation - Output Control

This option allows access to control any outputs that may be configured with your system. Outputs are relays or voltage trips used for controlling other types of equipment.


Up to 8 outputs may be displayed on the screen at one time with the Output number and name.

A scroll bar on the right side will scroll to other pages of outputs, as can the Previous and Next buttons.

A single press of an output button will change the state of the output.

Some outputs may be intentionally hidden. These are generally setup by the Installer for applications not necessarily needed from the keypad. These outputs will be greyed out to prevent accidental activation.

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

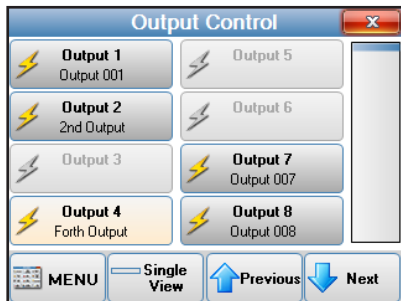


### Automation - Output Control - Single View

At the bottom of the Output Control screen is a “Single View” button. This provides a way to navigate directly to any output, even one that has been greyed out or “hidden” on the regular Output Control screen.

Press the “Single View” button for the single view Outputs screen.

Press the Next or Previous buttons to scroll through a list of available Outputs. You may also directly choose a Output by entering its two digit number (if known).

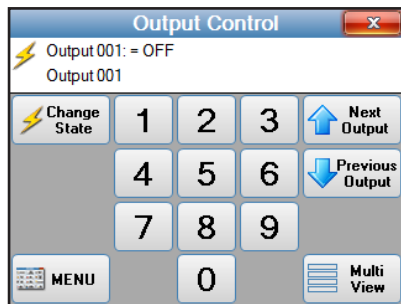

NOTE: Direct number entry is the only way to gain access to a hidden Output. The Next and Previous buttons skip over hidden Outputs.

In Single View the Output state may be toggled using the “Change State” button. i.e. Turn the Output ON or OFF.

To return to the regular Output screen press “Multi View”.


To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

## Automation - Temperature Sensors

If your M1 system includes remote temperature sensors their current readings may be viewed by pressing **Temperature Sensor** from the Automation Menu, followed by selecting the number corresponding to the appropriate sensor.

The Previous and Next buttons can be used to navigate to any additional sensor(s).

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

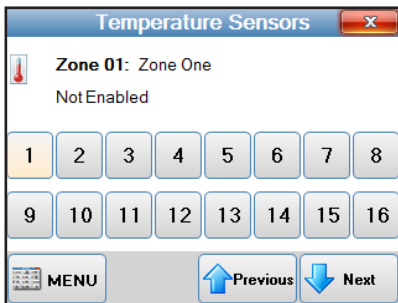



## Automation - Keypad Temperature


If your M1 system was installed with any M1KP Keypads you can use this option to view the temperature of their internal temperature sensor.

Consult your Installer to see if your system includes any M1KP Keypads.

This screen displays all active Keypads using a darker highlight on those buttons. Just be aware that only M1KP model Keypads contain a viewable temperature sensor.

The Previous and Next buttons skip between active Keypads.

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

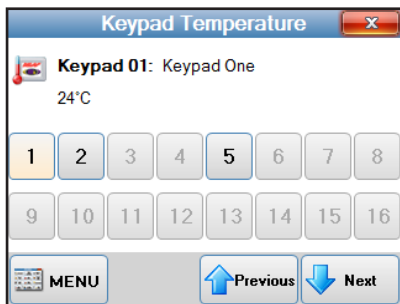


## Automation - Thermostat Temperature

If your M1 system was integrated with any intelligent communicating thermostats attached to your HVAC system, the current temperature reading on those may be viewed by pressing the corresponding numbered button.

This screen displays all active Thermostats using a darker highlight on those buttons. Consult your Installer if you aren't sure if your system has any communicating Thermostats, or aren't sure which numbers correspond to an attached Thermostat.

The Previous and Next buttons skip between active Thermostat(s).

To return to the Main Menu press the **Menu** button. To return completely back to the Main screen press the red close button on the top right of the screen.

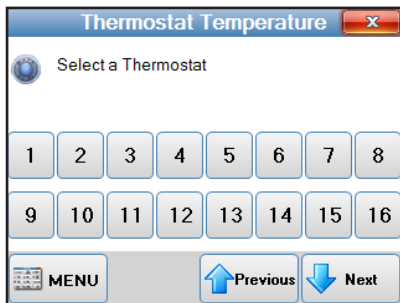


## Reset Smoke Detectors

If your M1 system includes Smoke Detectors (optional) wired to the control, these generally have a visual LED light that will illuminate whenever the detector has activated. This is useful for troubleshooting and locating the source of an alarm after a false or accidental trip.



The Reset Smoke Detectors button provides the means to reset (clear) the visual indicators by removing power from the detectors for 5 seconds.

To return to the Main Menu press **Menu**. To return completely back to the Main screen press the red close button on the top right of the screen.

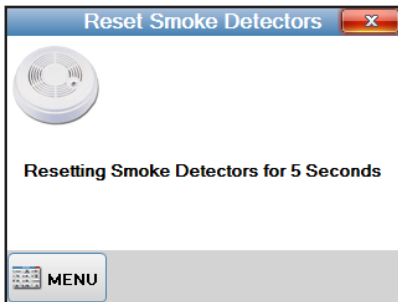

## Walk Test Area

It is recommended that you completely test your Security System on a weekly basis. Refer to System Testing explained later in this User Guide.

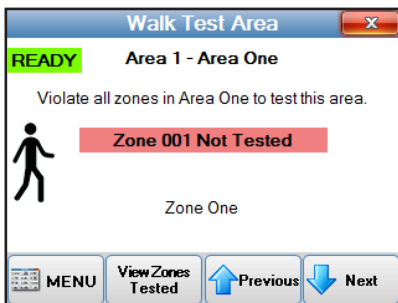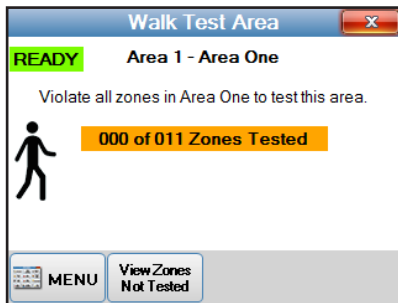

Navigator provides a quick and easy means of walk testing zones without disturbing your neighbors. This Walk Test option DOES NOT cause any alarm or trouble reports to be transmitted to a Central Station.


To return to the Main Menu press **Menu**. To return completely back to the Main screen press the red close button on the top right of the screen.

## History Log

Your M1 System stores the last 512 events of activity history. This menu option permits you to view those events, starting with the most recent.

The Next button will scroll backwards to the next most recent event. Previous will scroll forwards to the newer events. Scrolling in either direction will eventually lead to the “End of Log”.

The viewed results include the logged event, the day, the month, the time of the event ,and the event type. In many instances the event type will also include extended information such as the Zone, User, or Area Identification.

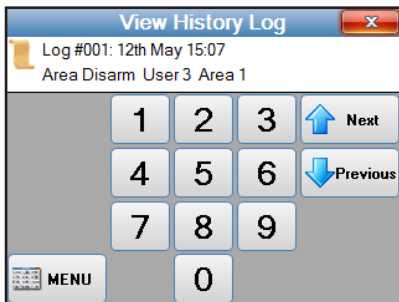


To return to the Main Menu press **Menu**. To return completely back to the Main screen press the red close button on the top right of the screen.

## Zone Status

This button allows you to view the current status of each zone one at a time. This differs from the “View Violated Zones” button on the Main screen because it allows you to view each and every zone, not just those that happen to be violated.

Press “Next Zone” or “Previous Zone” to move up and down the zone list.

To return to the Main Menu press **Menu**. To return completely back to the Main screen press the red close button on the top right of the screen.

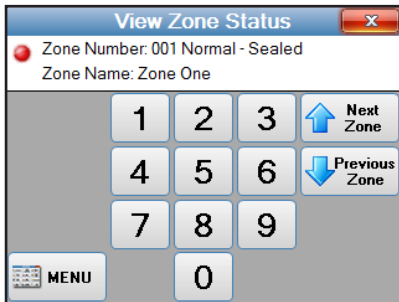



## Change User Codes

(This requires a Master Level User Code)

Your system supports up to 199 Users as enabled by the Installer. A User with a Master Level Code may change, edit, or delete other Users.

Press “Change User Codes” and then enter your Master Level code. Use the “Next User” or “Previous User” to find the User to be changed.

Press “Change Code” to modify the code of this User.

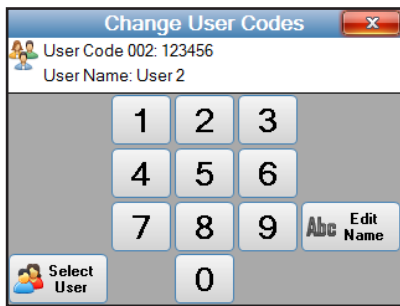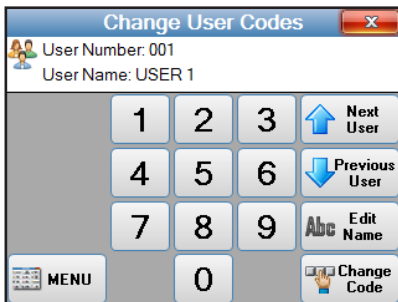

Enter the new unique 4 digit code you wish to allocate to this User. If your system is set for a 6 digit number then enter a new 6 digit code.


From either screen you may press

“Edit Name” to change the name assigned to this User.

Use the on-screen keyboard to type the name for this User.

**IMPORTANT!** Be certain to press “Save Name” when done.

To return to the Main Menu press **Menu**. To return completely back to the Main screen press the red close button on the top right of the screen.

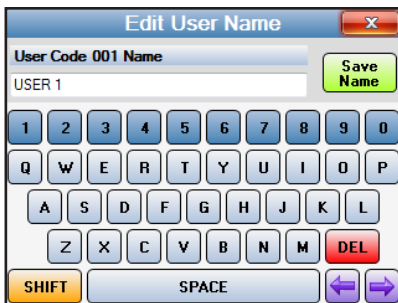

## **System Settings** (A Master or Installer Code is required for these options)

This manual does not go into detail on the Systems Settings options. Many are self-explanatory, while others are intended for use **ONLY** by the Installer. Consult the installer if you have any questions or need more information.

**Set System Clock** - Time is entered in 24hr format. Use the numeric keys for data entry and the “Set ..” keys for choosing the entry position.

**Adjust Volume** - This permits volume adjustment of the speaker for “Non-Alarm” messages **ONLY**. The volume range is 0 to 7.


**Keypad Adjustments** - This permits the Beep Tone, Beep Volume, and Backlight (inactive) level to be adjusted.

**System Test** - **PRIMARYLY FOR INSTALLER USE ONLY!**

**Download Control** - **PRIMARYLY FOR INSTALLER USE ONLY!** This option should not be used except under the direction of the Installer!

**System Diagnostics** - **PRIMARYLY FOR INSTALLER USE ONLY!**

**Custom Voice Message Record** - **PRIMARYLY FOR INSTALLER USE ONLY!** This option should only be used under the guidance and direction of the Installer!

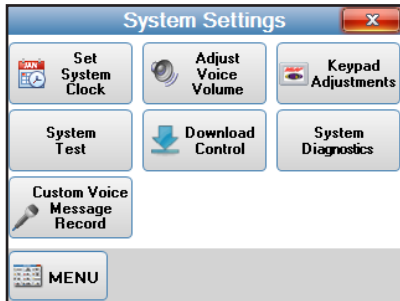

## **Installation Programming**

\* Not applicable to the User \* This option requires entry of the Installer Level Program Code.

## Select Area

(This Option requires entry of a valid User Code)

Your system may be configured to allow control of multiple areas (e.g. Office, House, Garage etc). This allows a part of the system to be Armed, while others are disarmed. The “Select Area” and “Change Keypad Area” screen works as follows with two types of multiple area control.

1. Temporary Map another Area - Press the desired Area from the list and then press “Change Area”. In the example shown, if your Navigator keypad normally controlled Area One, you could temporarily change it to control Area Two or Area Three.

All keypad functions of Area 2 or 3 will be available, including arm, disarm, F-Keys, etc., displaying just as if it were primarily assigned to that area.



After 1 minute of no key presses the keypad will return to display its primary assigned area.

2. Collectively Control all Areas - Press the Control All Areas button.

This displays the Arm and Disarm of all areas that are available to the User based on the User Code entered. It permits the state of each available area to be changed. This does NOT map to full functionality like option 1.


To change the status of any Area while in this mode, simply click on the Area from this screen and the Area will change its state from Arm / Disarm or visa versa. This also allows for multiple Areas to be selected to be changed from the one screen.

To return to the Main Menu press **Menu**. To return completely back to the Main screen press EXIT of the red close button on the top right of the screen.



## **Synchronise**


This is primarily for use by the Installer. After any programming changes are made to the M1 Control it may be necessary to activate this option so that Navigator can update and synchronise itself with the control.

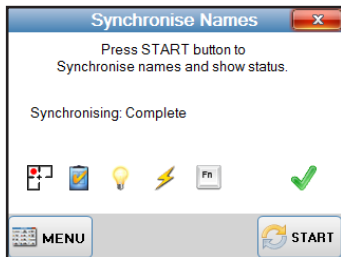

## **Clean Screen**


This option will disable the screen for 10 seconds to allow cleaning of the screen surface. Use Only a Soft Dry Cloth!

**DO NOT USE GLASS CLEANER!**

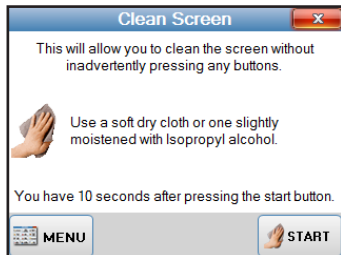


## **Authorise**

This screen will display whenever a particular option or feature requires the entry of a User Code. The cancel button may be used to clear or to cancel the operation.

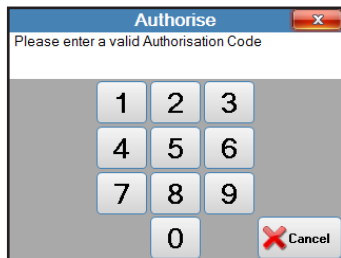

## **Keypad Locked**

The M1 offers a Keypad lockout option to help protect against endless attempts by a crook to search for valid User Codes. Lockout is triggered by repeated entry of invalid digits in a row with no response by the system. The installer must enable this option (Global Option #12) and set the number of digits. Should that number of invalid digits be reached the Keypad will Lock for a duration of 60 seconds.

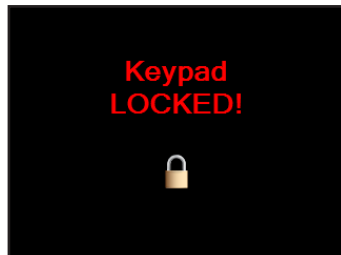

## **Fire Safety & Maintenance**

If the fire alarm activates, the siren or bell will pulse ON and OFF and the display will show “Fire Alarm”. Always follow your evacuation plan and leave the building immediately, even if the a fire condition is not apparent. If your system is connected to a central monitoring station, an emergency report could be sent to that center. If you discover the fire alarm was in error, notify the central monitoring station to avoid an unnecessary response. If the fire alarm sounds at night or you have any doubt about whether the alarm is real, the safest response is to evacuate the building.

### **Silencing a Fire Alarm**

To silence the alarm, press the Clear key. The display will continue to show “Fire Alarm” until you enter your user code to acknowledge the alarm.

### **Resetting Smoke Detectors**

Refer to Menu 2, page 16 for instructions on resetting Smoke Detectors.

### **Acknowledge/Reset an Alarm**

After a fire alarm is silenced the display will continue to show “Fire Alarm” until the detectors are reset and the alarm has been acknowledged by entering of your user code. Note: If the Clear was not used to silence the alarm then it may be necessary to enter the user code twice.

### **Household Fire Safety Audit**

To reduce the risk of fire, it is recommended that a household fire safety audit be conducted and a fire escape plan developed.

- Are all electrical outlets and appliances in a safe and working condition?
- Avoid overloading lighting and outlet circuits and inspect all cords periodically for damage or frayed conditions. Seek professional electricians assistance if you suspect any weaknesses or discover any conditions you deem unsafe.
- Are all flammable liquids stored safely in well ventilated cool areas and in proper safety containers? Avoid cleaning with flammable liquids.
- Are lighters, matches, and hazardous materials stored properly and out of reach of children?
- Are fireplaces and furnaces in good working order? Seek professional assistance and have these devices serviced and cleaned periodically.




## Emergency Evacuation Plans

Preparation of an evacuation plan is of prime importance in fire prevention. Establish a household emergency evacuation plan in the event of fire. Refer to the Smoke Detector instructions concerning their mounting, layout and spacing.

- 1 Evaluate possible escape routes from your home.
- 2 Select 2 escape routes from each room.
- 3 Rooms on the second floor should have a rope ladder. Be sure it will reach the ground.
- 4 Draw a sketch of your escape plan so everyone is familiar with it.
- 5 Practice your escape plan to assure that everyone knows what to do.
- 6 Establish a meeting place outside where your family is to report. Once you have evacuated the house do not return to a burning house.
- 7 Advise the local fire authority that you have installed a fire alarm system.
- 8 When the fire alarm signals, LEAVE IMMEDIATELY. Do not stop for belongings.
- 9 If a fire occurs, test the door. If hot, use your alternate route. If the door is cool, brace your shoulder against it and open it cautiously. Shut the door to help prevent the fire and smoke from spreading. Crawl through smoke, holding your breath.
- 10 Contact the Fire Department from a neighbor's telephone.
- 11 Everyone including neighbors should be familiar with the Fire and Burglary signals.

### EMERGENCY EVACUATION PLAN

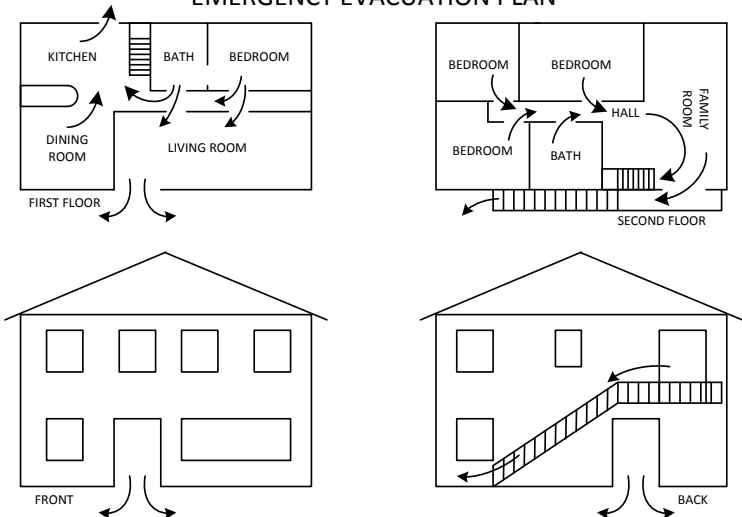

## System Testing

To assure the proper working order the system should be tested once a week using the following procedure. **If the system is monitored always contact the Central Monitoring Station prior to performing any test.**

Secure all protected doors and windows.

1. Press Away or enter a valid User code to arm the system.
2. System Armed will display and the exit tone will start. At the end of the exit delay the alarm system will be armed Away.
3. Trip the system by opening a protected entry or walking in front of a motion.
4. Confirm that the alarm sounding device (bell or siren) activates.
5. Disarm the system to silence the system and return to normal status.

To test the system while also checking the system backup battery:

1. Unplug the AC charging transformer from the AC wall outlet. A screwdriver may be required to remove the transformer hold down screw.
2. After a programmable time delay the keypad should display AC Trouble.
3. Arm and activate the alarm using the previous steps 1 thru 5 above.

**IMPORTANT!** Once the test has been completed PLEASE REMEMBER to plug the AC transformer back into the AC wall outlet.

A manual battery test may be performed without tripping the alarm.

1. Press the MENU button and select the System Settings button. Enter a valid User Code when prompted.
3. Press the System Test button.
4. Press the button labeled "Battery Test for 30 Seconds".
5. The battery voltage and current (amperage consumed by the system) will be displayed. Battery is OK if it maintains a voltage above 12.2V for the test duration. If a LOW BATTERY trouble occurs, contact the installation company to have them retest and/or replace the battery.

NOTE: This control unit was manufactured under rigid quality standards. Maintenance is best performed by the installing company with trained service personnel.

### FCC Compliance Statement

This device complies with Part 15 of FCC Rules which are designed to provide reasonable protection against interference in a residential installation. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Navigator Protective Screen Film



Navigator is supplied with a pre-cut self-adhesive protective film overlay. This film may be installed by the customer to help protect the touchscreen glass against marks and scratches that may occur during normal use.

**NOTE:** Should the film become damaged during installation or use, similar film can be purchased from smart phone retailers and cut to fit the M1KPNV.

**STEP 1.** Make certain that the screen surface is clean of any lint or oils from your fingers. Wipe with a soft dry cloth. **DO NOT USE GLASS CLEANER!**

**STEP 2.** Use the No. 1 tab to peel off the self-adhesive backing mask.

Grip the Protective Screen by the remaining (No. 2) tab. **DO NOT touch the exposed surface of the adhesive film!**

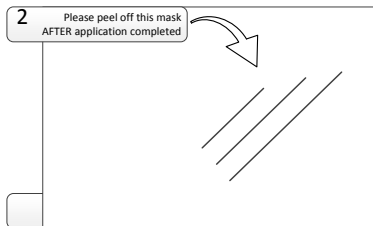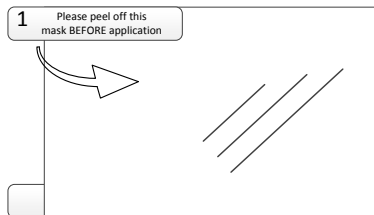


**STEP 3.** Flip the protective film over so that the position of the No. 2 tab is at the top left.

**Reminder - DO NOT touch the exposed surface of the adhesive film!**

**STEP 4.** Still gripping the No. 2 tab, carefully apply the protective film to the screen surface. Start at the corner of one end and smooth the film as you go to remove any air bubbles.

**STEP 5.** When complete peel off the top mask and discard. Navigator is now ready for use.

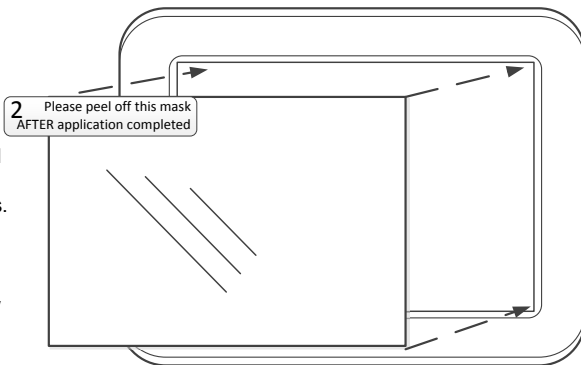

***ELK***

**PRODUCTS, INC.**

[www.elkproducts.com](http://www.elkproducts.com)

Printed in USA